

3

Valgfrie funksjoner
Valgfrie innstillinger
Valinnaist asetukset
Valfria inställningar

Ustawienia opcjonalne
Fonctions supplémentaires
Optionale Funktionen

Extra functies
Ek fonksiyonlar
Дополнительные функции

Πρόσθετες λειτουργίες
Tónábbi funkciók
Dodatne funkcije
Допълнителни настройки

Program Ohjelmointi Program

Programm Programma

Програма
Прόγραμμα
Програми

Overstyring	Priorité	Смена режимов
Överstyrning	Übersteuern	Παράκαμψη
Ohitus	Voorrang	Felülírás - Promjena
Kasowanie ustawień	Geçersiz kı	Промяна на режима

Figure 1 consists of nine horizontal bar charts, labeled Pr. 1 through Pr. 9, each representing a 24-hour period (0000 to 2400). The bars are divided into segments of different colors (white, light gray, dark gray) and contain icons (star, crescent moon) indicating specific activities. The x-axis for each bar is labeled with time values: 0000, 0600, 1500, 1600, 1700, 2000, and 2400.

- Pr. 1:** A single white bar from 0000 to 2400 with a star icon at approximately 1200.
- Pr. 2:** A dark gray bar from 0000 to 0600 with a crescent moon icon, followed by a white bar from 0600 to 2300 with a star icon, and a small dark gray segment at the end.
- Pr. 3:** A dark gray bar from 0000 to 0700 with a crescent moon icon, followed by a white bar from 0700 to 2400 with a star icon.
- Pr. 4:** A dark gray bar from 0000 to 1500 with a crescent moon icon, followed by a white bar from 1500 to 2300 with a star icon, and a small dark gray segment at the end.
- Pr. 5:** A dark gray bar from 0000 to 0600 with a crescent moon icon, a white segment from 0600 to 0800 with a star icon, a dark gray segment from 0800 to 1500 with a crescent moon icon, a white segment from 1500 to 2300 with a star icon, and a small dark gray segment at the end.
- Pr. 6:** A dark gray bar from 0000 to 0600 with a crescent moon icon, a white segment from 0600 to 0800 with a star icon, a dark gray segment from 0800 to 1700 with a crescent moon icon, a white segment from 1700 to 2300 with a star icon, and a small dark gray segment at the end.
- Pr. 7:** A dark gray bar from 0000 to 0600 with a crescent moon icon, a white bar from 0600 to 1600 with a star icon, and a dark gray bar from 1600 to 2400 with a crescent moon icon.
- Pr. 8:** A dark gray bar from 0000 to 0600 with a crescent moon icon, a white bar from 0600 to 2000 with a star icon, and a dark gray bar from 2000 to 2400 with a crescent moon icon.
- Pr. 9:** A single dark gray bar from 0000 to 2400 with a crescent moon icon at approximately 1800.

ECU-2Te har ni døgnprogrammer.
Velg ett program for hver ukedag.

ECU-2Te har ni 24-timersprogrammer.
Vælg et program for hver ukedag.

ECU-2Te:llä on yhdeksän 24 tunnin ohjelmaa. Valitse yksi ohjelma jokaiselle päivälle.

ECU-2Te har nio 24-timmarsprogram.
Välj ett program för varje veckodag.

ECU-2Te ma dziewięć programów 24-godzinnych.
Należy wybrać program na każdy dzień tygodnia

ECU-2Te a neuf programmes 24 heures sur 24.
Sélectionnez un programme pour chaque jour.

ECU-2Te hat neun 24-Stunden-Programme.
Wählen Sie für jeden Tag ein Programm aus.

ECU-2Te heeft negen 24 uur programma's.
Selecteer een programma voor elke dag.

ECU-2Te dokuz 24 saatlik programa sahiptir.
Her gün için bir program seçin.

ECU-2Te имеет девять 24-часовых программ.
Выберите одну программу для каждого дня.

Ο ECU-2Te διαθέτει εννέα προγράμματα 24 ωρών.
Επιλέξτε ένα πρόγραμμα για κάθε ημέρα της
εβδομάδας.

Az ECU-2Te kilenc 24 órás programot tartalmaz.
Válasszon egy programot minden napra.

ECU-2Te ima devet 24-satnih programa.
Odaberite jedan program za svaki dan.

ECU-2Te има девет 24-часови програми. Изберете една програма за всеки ден от седмицата.

Tryck samtidigt på **↵** og +
Tryk samtidigt på **↵** og +
Paina samanaikaisesti **↵** ja +
Tryck samtidigt på **↵** och +
Nacisnąć jednocześnie > oraz +
Appuyez simultanément sur **↵** et +
Gleichzeitig **↵** und + drücken

Druk tegelijkertijd op **↵** en +
Aynı anda **↵** ve +
Нажмите одновременно **↵** и +
Πατήστε ταυτόχρονα **↵** και +
Nyomja meg egyszerre a **↵** és + gombot-
Pritisnite istovremeno **↵** i +
Натиснете **↵** и + едновременно

A: Velg program	Sélection de programme
Vælg program	Programm auswählen
Valitse ohjelma	Selecteer programma
Välj program	Programı seçin
Wybrać program	

B: Bekreft	Confirmer
Bekræft	Bestätigen
Vahvista	Bevestigen
Bekräfta	Onayla
Potwierdzić	

C: Velg program	Sélection de programme
Vælg program	Programm auswählen
Valitse ohjelma	Selecteer programma
Välj program	Programı seçin
Wybrać program	

D: Bekreft	Confirmer
Bekræft	Bestätigen
Vahvista	Bevestigen
Bekräfta	Onayla
Potwierdzić	

Gjenta	Répétez
Gentag	Wiederholen
Toista	Herhalen
Upprepa	Tekrar
Powtórzyć	

Выберите программу
 Επιλέξτε πρόγραμμα
 Válasszon programot
 Odaberite program
 Изберете програма

Подтвердите
Επιβεβαιώστε
Jónáhagyás
Potvrđiti
Потвърдете

Выберите программу
Επιλέξτε πρόγραμμα
Válasszon programot
Odaberite program
Изберете програма

Подтвердите
Επιβεβαιώστε
Jónáhagás
Potvrđiti
Потвърдете

Diagram illustrating the digital display and control panel. The display shows 'Pr: 11' and 'M'. The control panel has buttons labeled 'P', 'A', and 'B'.

Tuesday - Tiistai - Tisdag - **Wtorek**
 Mardi - Dienstag - Salı - Вторник
 Түштү - Kedd - Utorak - Вторник

A diagram showing a hand interacting with a device. The device screen displays a lock icon on the left and a plus sign on the right. A bracket labeled 'P' is positioned above the plus sign. The hand is shown with the index finger pointing towards the plus sign.

Tryck samtidigt på ↵ og ✓
Tryk samtidigt på ↵ og ✓
Paina samanaikaisesti ↵ ja ✓
Tryck samtidigt på ↵ och ✓
Nacisnąć jednocześnie > oraz ✓
Appuyez simultanément sur ↵ et ✓
Gleichzeitig ↵ und ✓ drücken

Druk tegelijkertijd op **↵** en **✓**
 Aynı anda **↵** ve **✓**
 Нажмите одновременно **↵** и **✓**
 Πατήστε ταυτόχρονα **↵** και **✓**
 Nyomja meg egyszerre a **↵** és **✓** gombot
 Pritisnite istovremeno **↵** i **✓**
 Натиснете **↵** и **✓** едновременно

**Tastelås
Näppäinlukko
Knapplås
okada przycisków
Verrouillage
Tastensperre
Vergrendeling**

Tuș kilidi
Блокировка
клавиатуры
Κλείδωμα
πλήκτρων
Billentyűzár
Blokiranje tipki
Блокировка

Tastelås	Tuș kilidi
Näppäinlukko	Блокировка
Knappås	клавиатуры
okada przycisków	Κλείδωμα
Verrouillage	πλήκτρων
Tastensperre	Billentyűzár
Vergrendeling	Blokiranje tipki
	Блокировка